

Fisher-Price®



FXC59

OWNER'S MANUAL

BEFORE YOU BEGIN



IMPORTANT!


Please keep these instructions for future reference as they contain important information.

Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.



Adult assembly is required. Tool needed for assembly: Phillips screwdriver (not included).

Product features and decoration may vary from images.

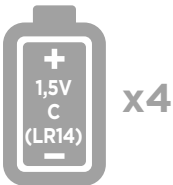

Four C batteries are required (included). Batteries included are for demonstration purposes only.

For longer life, use **alkaline** batteries.



This product comes with an adapter to use in on a crib or a table. Attach the adapter to the top edge of the soother for crib use or the bottom edge for table top use. All of the screws used to assemble the adapter are attached to the adapter.



To clean, wipe this toy with a damp cloth. Do not immerse.



⚠ WARNING

Prevent Entanglement Injury

This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.

BATTERY INSTALLATION


Loosen the screws in the battery compartment door and lift to remove the door. Remove the batteries and properly dispose.

Insert four C (LR14) **alkaline** batteries.

Replace the battery compartment door and tighten the screws.

When sound, lights or motion from this toy become faint, slow or stop, it's time for an adult to change the batteries.

If this toy begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.

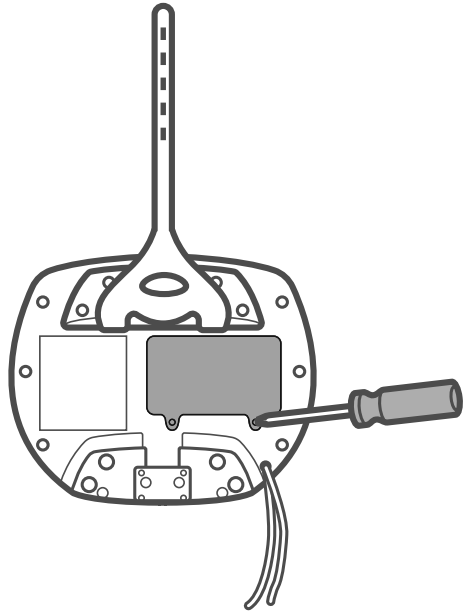

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.

Insert batteries as indicated inside the battery compartment (+ and -).

Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.

Never short-circuit the battery terminals.

Use only batteries of the same or equivalent type, as recommended.


Do not charge non-rechargeable batteries.

Remove rechargeable batteries from the product before charging.


If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

SET UP FOR CRIB USE

1

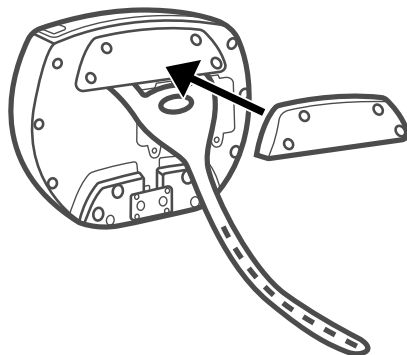


2

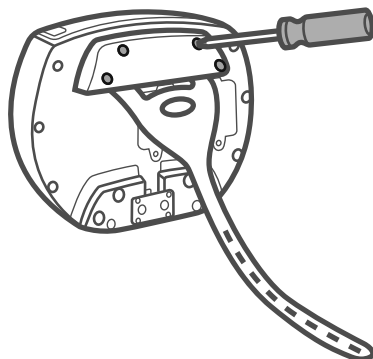

Tighten **all four** screws in the adapter. Do not over-tighten.



3

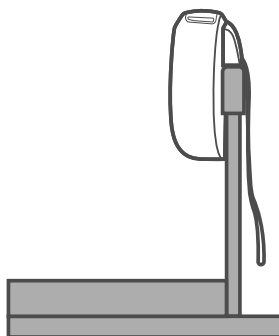

Place the soother on the top rail so the screen is toward the inside of the crib.


SET UP FOR CRIB USE

4

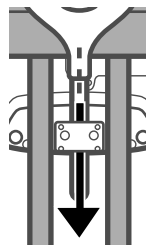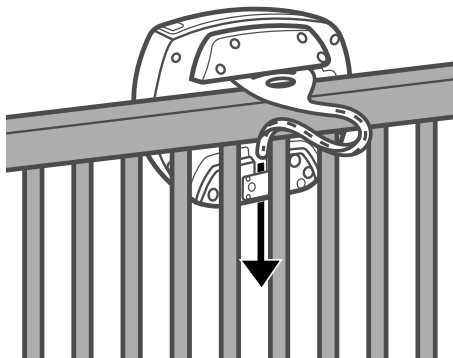

Fit the end of the strap down through the slot.

5

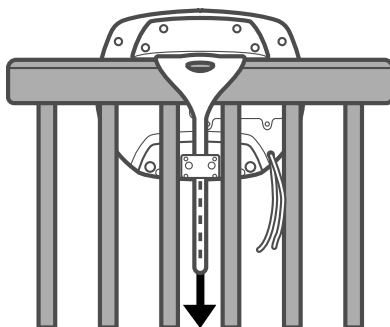


Pull the strap so that the soother is tight against the crib rail.

6

Tie the strings around a crib spindle in a knot.




Do not tie the strings in a bow, as they can be easily untied.

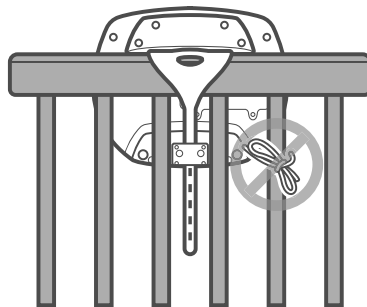


SETUP FOR TABLE TOP USE

1

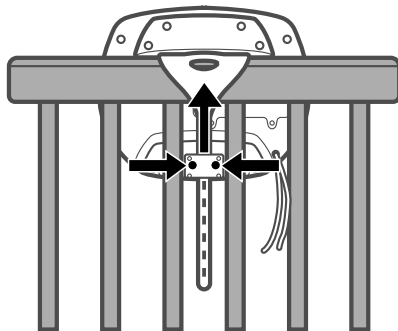


While pressing the buttons, pull the strap. Remove the soother from the crib.

2

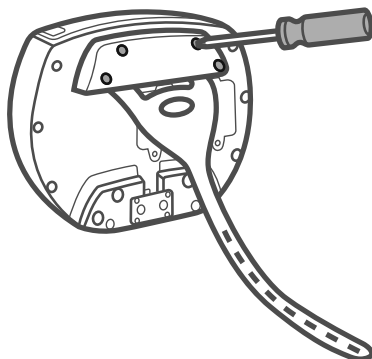


Loosen **all four** screws in the adapter.

3

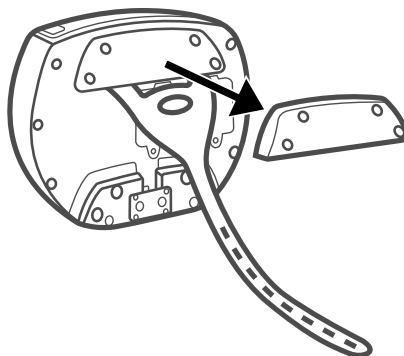


SETUP FOR TABLE TOP USE

4


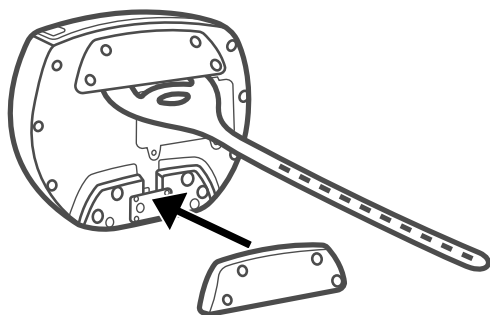


Tighten **all four** screws in the adapter. Do not over-tighten.

5

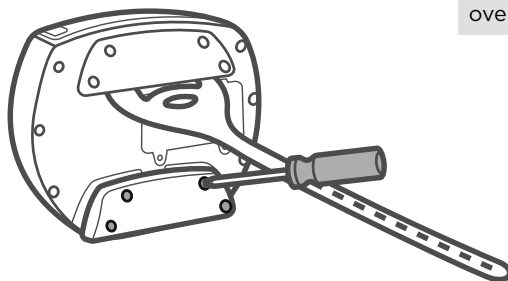


6

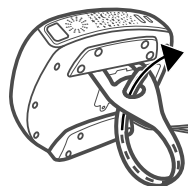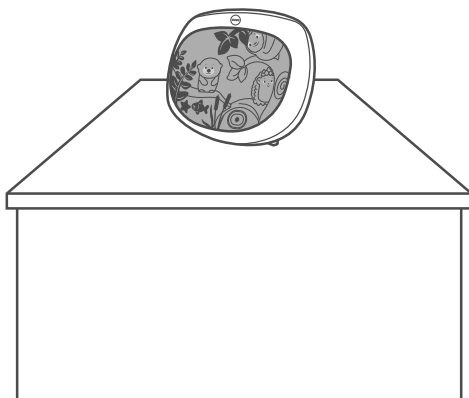

Fit the end of the strap up through the opening in the strap.

READY, SETTLE, SLEEP™

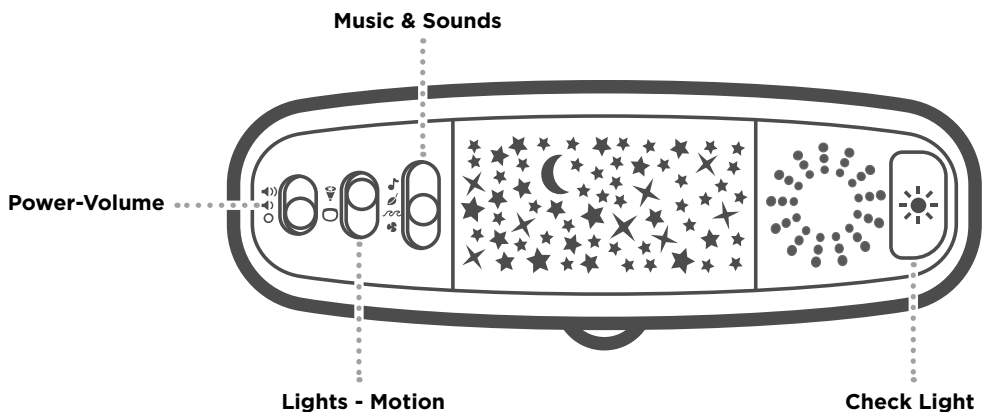

Multi-colored Lights and Character Motion



Starlight Projection



Music & Sounds

Power-Volume

- 🔊 ON with high volume
- 🔊 ON with low volume
- ⏻ OFF

Multi-colored Lights and Character Motion

- 🔘 Watch the animals in motion along with a light show. You can also add music or sounds to accompany lights and motion.
- 💡 Baby enjoys a starlight projection show without music/sounds.

Music & Sounds

- 🎵 Music
- 🌿 Nature Sounds
- 🌊 Waves
- 🔊 White Noise

Lights, motion and sound gradually dim, slow and fade and then turn off, Character motion turns off after about 15 minutes; lights turn off after 15 minutes and music/sounds turn off after 30 minutes.

Crib Light

- ☀️ Press to to check-in on baby. The light stays on for about 5 minutes. If you'd like to turn the light of sooner, press the button again.

Child-Activation Button

- 🌟 When the soother turns off and power is still on, baby can start the action again by pressing this button.

GENERAL INFORMATION

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



UNITED STATES: 1-800-432-5437.
Fisher-Price, Inc., 636 Girard Avenue,
East Aurora, NY 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall
Business Park, Maidenhead SL6 4UB. Helpline:
01628 500303; www.service.mattel.com/uk.

Mattel Europa B.V., Godel 1, 1186 MJ
Amstelveen, Nederland.

CANADA: 1-800-432-5437. Mattel Canada Inc.,
6155 Freemont Blvd., Mississauga, Ontario
L5R 3W2.

AUSTRALIA: Mattel Australia Pty. Ltd., 658
Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory
Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive,
Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd., Room 503-09,
North Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.
Tel.: (852) 3185-6500.

MALAYSIA: Diimport & Diedarkan Oleh:
Mattel Southeast Asia Pte. Ltd., No 19-1,
Tower 3 Avenue 7, Bangsar South City, No 8,
Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia.
Tel: 03-33419052.

SOUTH AFRICA: Mattel South Africa (PTY)
LTD, Office 102 I3, 30 Melrose Boulevard,
Johannesburg 2196.